

Hardware

is it possible to turn off auditory alert beeps on my units to make them less noticable?

Yes. In Geotab, navigate to the Vehicles>(select vehicle)>More Details>Driver Feedback. Adjust the settings as needed.

Unique solution ID: #1007

Author: n/a

Last update: 2021-05-06 14:57