

ELD, DVIR, IFTA

If the driver is logged in and driving when he stops and parks the vehicle, does it automatically switch him to on-duty not driving?

Under “more details” in the Geotab>Vehicles>device name>Vehicle Edit>More Details>Device Editor>Detailed Device Info.

It appears much harder to find than it is. Basically get to where you can edit a devices details and click More Details in the top menu on the right.

In the device editor change these settings.

1. "Turn GPS receiver off: must NOT be set on “immediately” but to "10 Minutes after the ignition is turned off".
2. Set "Periodically wake GPS" should be turned "on".

Once the steps are taken the device will automatically change status after 5 minutes of no movement.

ELD, DVIR, IFTA

Unique solution ID: #1103

Author: n/a

Last update: 2022-07-15 20:58