

# Hardware

## Voltage requirements for GO system auxiliary IOX

Voltage parameters to utilize the Geoatb IOX-AUX to monitor electrical circuits turning on and off. Auxiliaries need to be utilized the same way throughout the entire fleet. Aux 1 must measure the same on every truck so exceptions and reports function correctly. How the auxiliary is measured can be inverted in the Geotab application. This means that instead of measure the "on" time, it is possible to measure the "off" time by inverting the setting.

Minimum = 3.3v

Maximum = 24v

Unique solution ID: #1169

Author: n/a

Last update: 2021-11-03 16:06