

Hardware

Fix GO Talk Volume

You can create a custom parameter that sets a minimum volume of 1 and up to a maximum of 6.

You can apply the parameter listed below:

```
<Parameter Description='GoTalk min Volume level=6 (0 to 6)' Offset='175' Bytes='6'  
IsEnabled='true'/>
```

You can adjust the volume by varying between 1 and 6 in the Bytes='6' field.

In this case it is set to 6.

Steps to Configure

- In MyGeotab>Vehicle select the vehicle.
- Click More Details in the top menu.
- Select the Custom Parameters menu
- Add the parameter listed above and select Add New Parameter

Unique solution ID: #1030

Author: n/a

Last update: 2021-05-06 19:55