

Application

Displaying zones on the Geotab Map

When viewing the current location of your vehicle(s), you can optionally display informational layers on top of the map. Select View, then from the list select Show/Hide Zones to display any custom zones you have created which are currently in view. Repeat these steps to hide zones.

Note: Zones are used to denote areas of interest such as customer areas, workplaces or people's homes and can be used in exception reporting. [Zones](#).

Unique solution ID: #1117

Author: n/a

Last update: 2021-10-27 19:28