

Application

How do I remove or delete a zone in Geotab?

Zones can be removed from the database by selecting a zone and then clicking Remove. Once the zone is removed, your reports which previously displayed the zone name will instead show the address if available and you will no longer be able to see the zone on the map. Making changes to or removing multiple zones at a time is made easy by using the checkbox at the top right hand corner to select multiple zones.

The screenshot displays the Geotab Zones management interface. On the left, a table lists five zones: Eron Home, FGCU, Kim's House, Lynn's House, and Otter Creek Farm. The 'FGCU' zone is selected. On the right, the 'Zone Details' panel for 'FGCU' is shown. A red arrow points to the 'Remove' button in the top right of this panel, with a red box labeled 'Click Remove' overlaid on it. The 'Remove' button is located next to 'Save', 'Cancel', and 'Show on map' buttons. Below the 'Remove' button, there are tabs for 'Zone Details' and 'Map View'. The 'Zone Details' tab is active, showing fields for Name, Publish to groups, Comment, Visible on map, Types, Indicate stops within zone, and End date.

Name	Zone type
Eron Home Company group	Customer
FGCU Company group	Customer
Kim's House Company group	Customer
Lynn's House Company group	Customer
Otter Creek Farm Company group	Customer

5 Zones Select none

Remove

Click Remove

Unique solution ID: #1119
Author: n/a
Last update: 2021-10-27 19:36