Application

is it possible to turn off auditory alert beeps on my units to make them less noticable?

Yes. In Geotab, navigate to the Vehicles>(select vehicle)>More Details>Driver Feedback. Adjust the settings as needed.

Unique solution ID: #1150 Author: n/a Last update: 2021-11-03 13:38

> Page 1 / 1 (c) 2024 Fleetistics <darryl.arnold@fleetistics.com> | 2024-05-18 08:08 URL: https://kb2.myfleetistics.com/index.php?action=faq&cat=8&id=151&artlang=en