

# Application

## How to check faults for a vehicle

### How to view vehicle faults

**Purpose:** This article outlines the procedure for viewing reported engine faults for a vehicle. Monitoring engine faults can provide insight into potential vehicle issues that can take a vehicle out of service. Also any unauthorized device removal is reported through engine faults.

### **Procedure:**

1. In the left menu click Engine & Maintenance (1) > Engine and Device(2) > Faults(3),
2. Select desired options filters (4)
3. Select vehicle/device, date period, and fault to locate or leave blank for all faults.
4. Specify the date range.

**Additional Note:** If you encounter issues, please open a support case for

# Application

assistance. The link below will contain instructions on how to create a support case.  
<https://www.fleetistics.com/support-cases-made-easy/>.

Unique solution ID: #1299

Author: n/a

Last update: 2021-11-08 15:36